
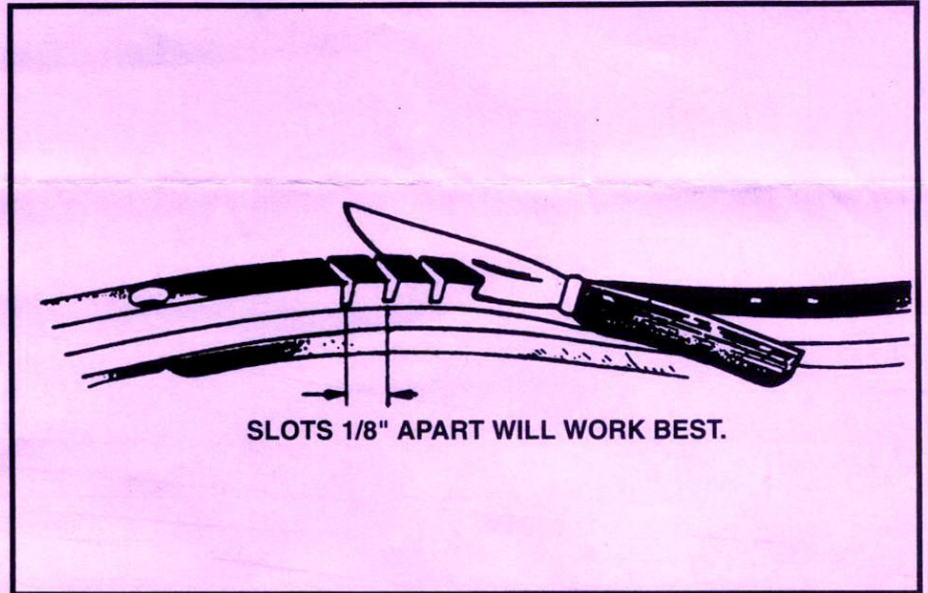


INSTRUCTIONS ■ INSTRUCTIONS ■ INSTRUCTIONS

VENT WINDOW RUBBER INSTALLATION INSTRUCTIONS

Metro Moulded Parts, Inc. offers excellent reproductions of original parts, with greater durability.

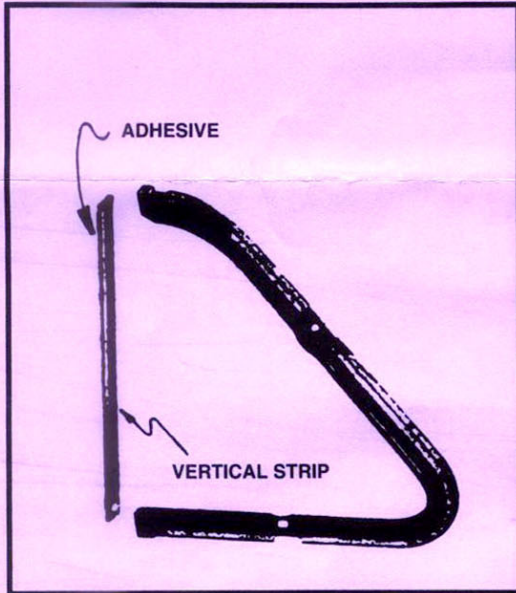

IMPORTANT! Please follow instructions carefully.

TOOLS NEEDED: Screwdriver, waterbased lubricant or soapy water, and sharp knife.

- 1. CAUTION:** Make sure your new seal will do the job before removing the old rubber and window frame.
- 2. PREPARATION:** Remove old rubber and any rust deposits before starting, otherwise new rubber may be difficult to install.
- 3. SLOTS:** Carefully cutting slots on the marked areas on the back of your Vent Window Rubber will remove any wrinkles in the sealing lip. Cuts should be 1/8" apart.
- 4. LUBRICATION:** Apply a lubricant to channel and rubber to ease installation. This is important to avoid damage to both the rubber and the frame.
- 5. INSTALLATION:** Install both pivot areas first, then carefully install the rest of the rubber in the middle section.
- 6. ENDS:** In some rare cases, ends may have to be cut to exact length or notched. This should be carefully marked out before cutting.

NOTE TO OUR CUSTOMERS: Vent windows seals are some of the most difficult parts to manufacture due to the many lips, notches, etc. Some details are unfeasible to manufacture. Your understanding is appreciated.

THANK YOU

Chevs - #4081806

METRO

Metro Moulded Parts Inc. Instructions #1 • 8/95