

New Port Engineering


2760 New Port Road Washington, MO 63090 (636)239-1698
Installation Instructions For Delay Wiper Switch © 1992

For customers who purchased the delay switch the same time as your Clean Wipe wiper drive.

1. The delay switch and wiper drive have been tested at the factory and require this important installation step to make the switch work properly. On the switch body you will see a BLACK (GROUND) WIRE extending from the switch. This wire needs to be connected or grounded to the motor assembly. By grounding the switch properly the intermittent capability of the switch will function. (see figure)

For customers who purchased the delay switch separately.

1. The delay switch comes from the factory with the necessary parts for easy installation.
2. Disconnect power to existing wiper drive.
3. Remove existing two speed standard switch provided with wiper drive. Remove existing terminal connectors at the switch end of the wiring harness. Reconnect wires from wiper drive to the appropriate colored wires on the delay switch.

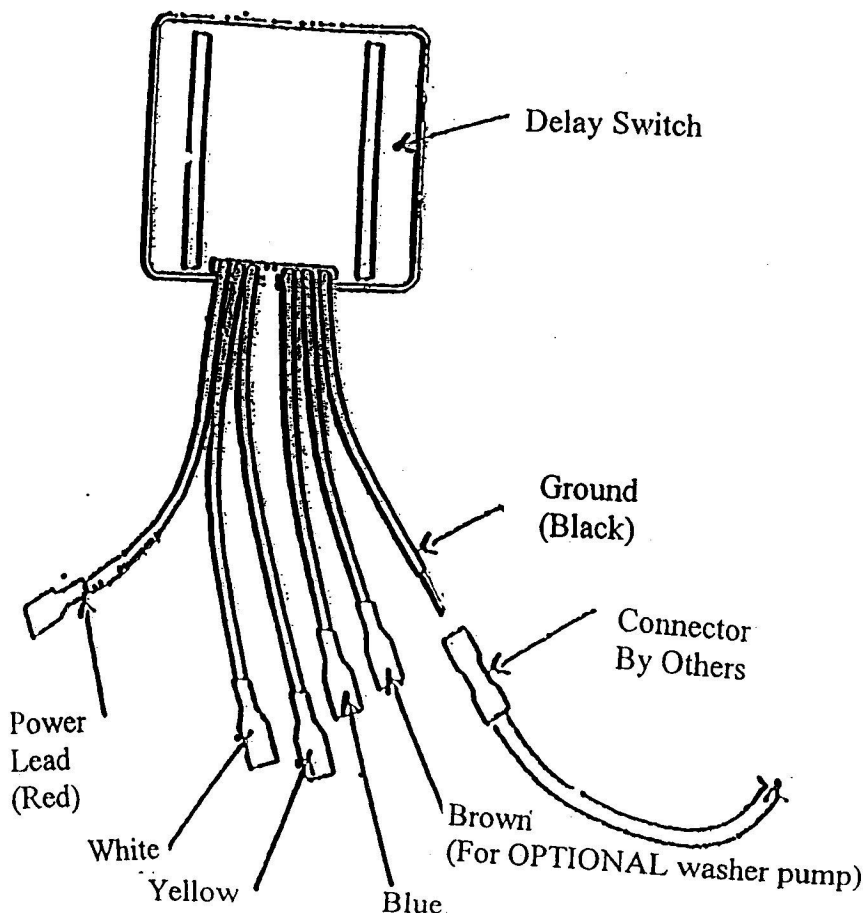

INS_4073750D