

INSTRUCTION SHEET # 101

SPEEDOMETER CABLE KIT INSTRUCTIONS

1. CUT CABLE WITH WIRE CUTTERS TO OVERALL LENGTH OF ORIGINAL CABLE. BE SURE TO ALLOW ROOM FOR TIP.
2. ATTACH TIP USING STAKING TOOL BY EITHER THE VISE METHOD (FIG 1) OR THE HAMMER METHOD (FIG 2).

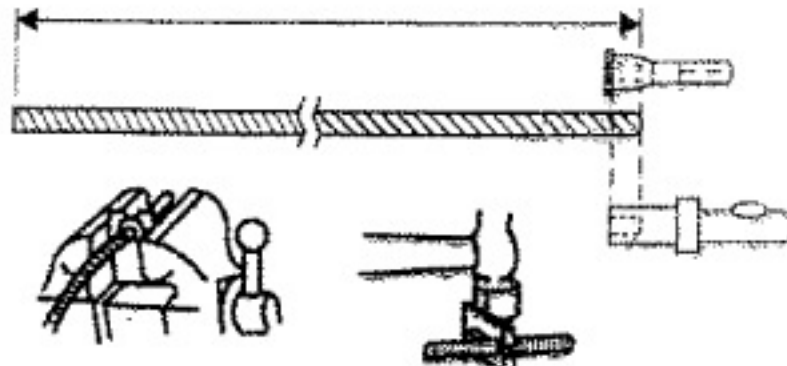


FIG 1

FIG 2