




INS_004

SERVICE INSTRUCTIONS

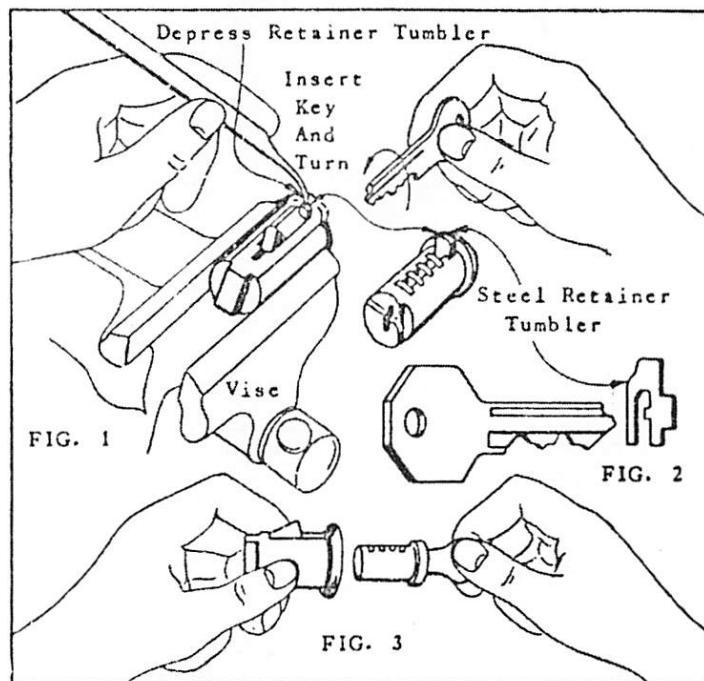

FOLLOW INSTRUCTIONS CAREFULLY IN ORDER LISTED

1. To unlock - insert key and turn 90 degrees clockwise.
 2. To open compartment door - PUSH cylinder in.
 3. Lock is fastened to door with screw and retainer clip.
 4. To remove cylinder from case - Hold in vise (See Fig 1). Fully depress steel retainer tumbler and hold it down while you insert key and turn clockwise; cylinder then can be pulled out. NOTE: Goove in key engages projection on retainer tumbler to hold retainer down while cylinder is being removed. (Fig 2)
 5. To insert cylinder in case - depress retainer tumbler with finger nail and hold it down hwile you insert key in cylinder. Push eylinder into case until it snaps in place (Fig 3) - Hold thumb against face of cylinder and remove key.
- NOTE: For 1951 and 1952 Model Chevrolet, use retainer cup #4587925,if needed.